



EXPLC communication construction – PRUN function

- ◆ Configuration

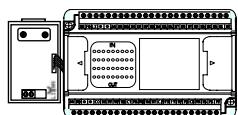


485
BD EXPLC
Master

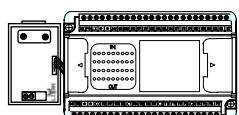

485
BD EXPLC
Slaver

Terminal connection of EX485BD:

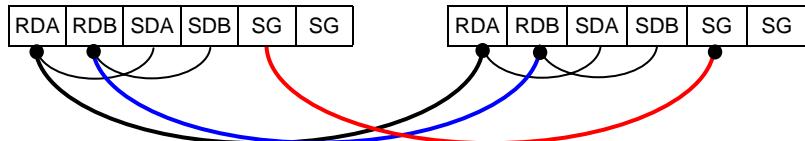

Note: The version of two PLCs (Master and Slaver) must be the same, i.e., the contents of D8001 of two PLCs are the same.

- ◆ Program function