
# EX1N, 1S


# Ex1nCTOL USER'S GUIDE (open Collector TO Line driver)

 This manual contains text, diagrams and explanations which will guide the reader in the correct installation and operation of the Ex1nCTOL special function block.

\*\*\* Introduction \*\*\*

- 1) The Ex1nCTOL(open Collector TO Line driver)
- signal conversion module. Maximum conversion frequency is 400Kpps.

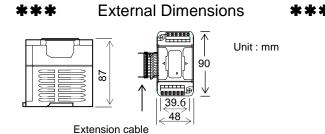


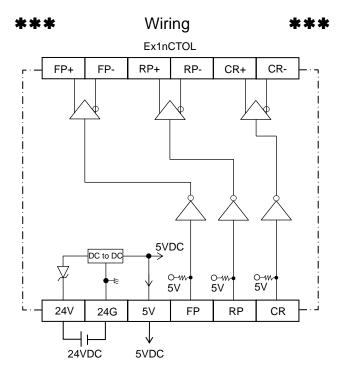

### **\*\*\*** Connection with PLC

\*\*\*

- 1) The blocks not occupy any points.
- Applicable PLC : Ex1n, Ex2n series.
  Ex1nCTOL are connected with the cable at the right of the main unit.

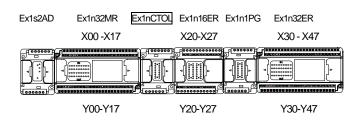

#### **\*\*\*** Specifications **\*\*\*** 1. Power supply specification and isolation

	ppiy opcomounon and lociation
Item	Content
Power input	24V DC±10% 85mA (supplied from the External)
Power output	+ 5V DC
Isolation	None

#### Ex1nCTOL-edoc0503v100a

## LIYAN ELECTRIC INDUSTRIAL LTD.

TEL: 886-4-25613700 FAX: 886-4-25613408 WEBSITE: http://www.liyanplc.com E-MAIL: twliyan@ms16.hinet.net